

STOPCOCK

STOPCOCK

STOPCOCK

STOPCOCK

STOPCOCK, STRAIGHT BORE, GLASS

H-1591

SINGLE STRAIGHT BORE, SOLID GLASS PLUG

BORE SIZE OF PLUG, mm	CODE
--------------------------	------

1	-1
2	-2
3	-3
4	-4
6	-5
8	-6
10	-7



STOPCOCK, STRAIGHT BORE, TEFLON

H-1592

SINGLE STRAIGHT BORE, SOLID TEFLON PLUG

BORE SIZE OF PLUG, mm	CODE
--------------------------	------

1	-1
2	-2
3	-3
4	-4
6	-5
8	-6
10	-7



STOPCOCK, THREE-WAY, OBLIQUE BORE, GLASS

H-1593

TWO PARALLEL OBLIQUE BORES, SOLID GLASS PLUG

BORE SIZE OF PLUG, mm	CODE
--------------------------	------

2	-1
4	-2



STOPCOCK, THREE-WAY, OBLIQUE BORE, GLASS

H-1594

TWO PARALLEL OBLIQUE BORES, SOLID GLASS PLUG

BORE SIZE OF PLUG, mm	CODE
--------------------------	------

2	-1
4	-2




STOPCOCK

STOPCOCK

STOPCOCK

STOPCOCK


H-1601 STOPCOCK, BURET, STRAIGHT



FREQUENTLY USED IN SEALING ONTO BURETS THAT HAVE BROKEN NEAR THE TIP. STRAIGHT BORE IN GLASS OR TEFLON

BORE SIZE OF PLUG, mm	GLASS CODE	TEFLON CODE
2	-1	-3
4	-2	-4

H-1602 STOPCOCK, T-BORE, SOLID GLASS PLUG

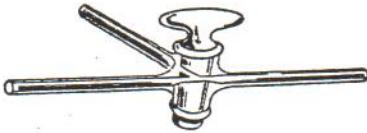

BORE SIZE OF PLUG, mm	CODE
2	-1
4	-2

H-1603 STOPCOCK, T-BORE, SOLID TEFLON PLUG



BORE SIZE OF PLUG, mm	CODE
2	-1
4	-2

H-1604 STOPCOCK, OBLIQUE BORE, HIGH VACUUM



EVACUATE BOTTOM CHAMBER BY USE OF HOLE IN HOLLOW PLUG THAT IS 90 DEGREES FROM BORE BOTTOM.

FOR EVACUATION PRIOR TO EXECUTION OF PROCEDURE ALIGN HOLE AND STEM.

BORE SIZE OF PLUG, mm	CODE
2	-1
4	-2